

BOTTOM SASH STOP REMOVAL

SINGLE HUNG & DOUBLE HUNG WINDOWS

The Sash Stops for the bottom sash on both Single Hung and Double Hung Windows are held in place with silicone. Prior to removal of these stops, the silicone bond must be severed or frame may be damaged.

Tools Required: Utility Knife

- 1) Locate the sash stops for the bottom sash. Stops will be located at the top of the interior sash track at the corner of the side and head jamb. There will be one on each side of the unit.
- 2) Using the utility knife as shown in the photograph, slide the blade between the stop and side jamb. **Note:** The Blade will go under the sash stop approximately 1/8".
- 3) Slide the utility knife the length of the sash stop to separate the adhesive from the stop and frame.
- 4) Using your fingers, reach under the sash stop and remove by pulling it out of the sash track.

If sash stop does not come out, repeat Step #3.

- 5) Repeat this process for the sash stop located on the opposite jamb.

